



By default,



3. Enter admin in both password fields and click Let

If your router is not new, or you have made a mistake in its configuration, it is helpful to reset it to factory defaults and configure it again.

1. Disconnect all cables except power.

2. Locate the WPS/Reset button. It is typically on the back of your router.